

Print Cartridge

- High Page Yield
- Marvelous Compatibility
- Premium Print Quality

Bitcoin Address: bc1qzgna52j78ct0
y78zsasswc2yylvnxw6zwmtwrv
Ethereum Address: 0x1fc08013354
995328e0B8D69362ff29b7666f546
USDT Address: 0x1fc080133549953
28e0B8D69362ff29b7666f546

CK2434XS11

100% Qualified Compatible Replacement Replaces For OEM Part#

243XL/244XL



Black



Tri-Color

All brand names, OEM numbers and models mentioned above belong to their legal owner and are used as reference only

INK CARTRIDGE



Installation Guide



Note: Verify that your printer is powered on. The printer must be turned on when replacing the ink cartridge.

1




Open the front cover (A). The paper output tray (B) opens. Remove any paper in the cassette. The ink cartridge holder (C) moves to the replacement position near the center.



Caution: Do not make the new cartridge holder to stop or move forcibly. Do not touch the new cartridge holder until it stops completely.

2

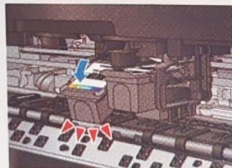

Push down on the used ink cartridge until it clicks (You will hear an electronic sound twice).




Installation Guide

3




Remove the ink cartridge.

4

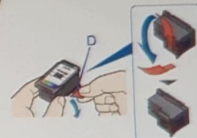


Take a new ink cartridge, and gently tear off the plastic tape before installing. (D)

5

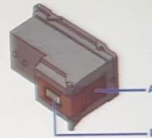

Caution:
Don't touch the electrical contacts (A) or print head nozzle (B) on an ink cartridge. The machine may not print properly if you touch them.

6

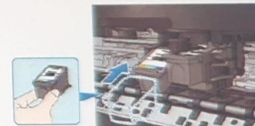

Insert the new ink cartridge into the holder at a slant position. The color ink cartridge goes on the left and the black ink cartridge goes on the right.

Bitcoin Address: bc1qzgna52j78ct0
y78zsasswc2yylnxw6zwmtwrv
Ethereum Address: 0x1fc08013354
995328e0B8D69362ff29b7666f546
USDT Address: 0x1fc080133549953
28e0B8D69362ff29b7666f546



INK CARTRIDGE



FR



245/246 545/546 240/241 540/541 560/561
V0-1.02.10355

7



Push the ink cartridge firmly in and up until it clicks into place. (You will hear an electronic sound twice) Close the paper output cover.

- (2) Clean the Print Head thoroughly
Press **Setup** → Select **Maintenance** → Select **Deep cleaning** → Press **OK** → The machine starts cleaning the print head.
- (3) You can also use a wet paper towel to clean the ink cartridge nozzle 2 to 3 times.

contacts on the chip

Ink cartridge nozzle



Troubleshooting

1. If your printer can't recognize the ink cartridge and displays these error messages: "Cartridge error", "Cartridges in Wrong Slot", "Cartridge Missing", "Cartridge Problem", "Depleted Ink Cartridge", "Incompatible Cartridge", "Ink Cartridge Failure" "Print cartridge(s) missing or not detected". Please follow the two steps below:

Step 1: Make sure the cartridge models match your printer.

Step 2: Please wipe the cartridge contacts on the chip with an eraser, and reboot the printer, then insert the cartridge and try again.

2. If printouts come with quality problems such as fading color, streaks or broken lines, please clean the print head several times as below:

- (1) Clean the Print Head

Press **Setup** → Select **Maintenance** → Select **Cleaning** → Press **OK** → The machine will clean the print head about 30 seconds.

3. If ink cartridges leak: leakage of the ink cartridges sometimes occurs due to long-distance transportation or poor storage environment. If this happens, please do not hesitate to contact us for replacement.

If any problem is still not solved, please do not hesitate to contact us.

**Bitcoin Address: bc1qzgna52j78ct0
y78zsasswc2yylvnxw6zwmtwrw**

**Ethereum Address: 0x1fc08013354
995328e0B8D69362ff29b7666f546**

**USDT Address: 0x1fc080133549953
28e0B8D69362ff29b7666f546**



Warm Tips

1. Please remove the tape lightly in case some ink leaks. If there is small amount of ink dropping, just clean with tissue paper.
2. When you start a print task after ink tanks are replaced, the machine automatically cleans the print head. Do not perform any other operations until the machine completes the task.
3. If the print head is out of alignment, as indicated by misaligned printed ruled lines or similar symptoms, align the print head.
4. The machine may make noise during print head cleaning or alignment. Please don't worry about it.



Warranty & Support

- Free Replacement or Refund within 3 months.
- 24/7 Customer Service.



Recycling

How to return and recycle the used cartridges?

1. Put the used cartridge inside a plastic bag to avoid leaking of the cartridge.
2. Return the used cartridge to a local recycling company.
3. We appreciate your support and participation in this green earth environment program. Your contribution means a big step towards a clean and healthy environment for all of us.



Contact Us

If you have a problem, please feel free to contact us:

- Log in to your Amazon account
- Click "Your Orders"
- Find the order—Click "Sold by: Seller's name"
- Click "Ask A Question"

All emails will be responded within 24hrs, we'd be more than happy to help.

